

PERSONAL PROTECTIVE EQUIPMENT (PPE)

PRODUCT CATALOGUE



EXPERT AUTOMOTIVE
— TRIM —



Thank you for enquiring about our latest offerings in Personal Protective Equipment (PPE). We have heeded the call of the Nation, and together with input from frontline medical personnel, have created a range of high quality, durable protective wear suitable for our customers.

Our background in CMT for the automotive and bedding industries has positioned us well for the seamless addition to our current manufacturing systems. Our new division now includes face masks, hooded coveralls, 2-piece scrub suit and protective gowns. The medical grade material used in our range has been sourced from reputable, locally produced manufacturers. The standards of excellence delivered to our core clientele is entrenched in our company's mandate, and this gives us the confidence to offer you a premium product for your industry.



THREE LAYER FILTER MASK



MASK PROPERTIES

- The EM-1TLF Mask meets the recommended guidelines by the RSA for manufacture of Face Masks as at 9/04/2020
- All layers have filter capabilities
- The middle filter is ISO14644 tested, and rated at the highest level
- Outer layer is hydrophobic, water repellent.
- Inner layer, soft and non-irritant
- Ergonomically shaped for optimal seal and comfort
- Two elastics bands for better support and fit
- Reusable on a rotational basis
- Filter efficacy unchanged after 4 washes*
- Complete unit with no replaceable parts
- Can be store conveniently when not required.

*Based on recommended usage guidelines


**Material information supplied as per manufacturers specifications*

INNER & OUTER LAYER

Spunbond Nonwoven – Soft, Water repellent, Hypoallergenic, Breathable

MIDDLE LAYER

FFP2 Mask Filter: ISO14644 Barrier Efficiency Tested. Rated 4/4

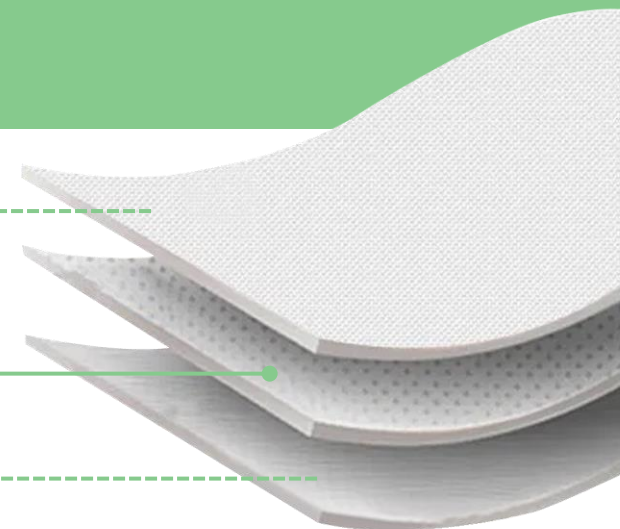

HOW TO USE

EM1 THREE LAYER FILTER MASK

- While all masks are designed ideally for single use, the EM-1TLF mask can be reused.
- We recommend the following guidelines for extended use based on testing applied to the Filter.

DAILY USER

- A daily user refers to a person using the mask for up to 8 hours/day (normal work week)
- The mask can be reused on a rotational basis as below
- Mask one will be used on day 1 and “rested” for 4 days. After air drying, store safely in a labelled envelope, to be reused again on Day 6, Day 11, Day 16
- Mask two will be used on day 2, “rested” and then reused on Day 7, Day 12 and Day 17,
- The mask must be air dried between uses for a minimum of 4 days, and stored in separate envelopes labelled by user’s name and mask number
- Each user should possess 5 masks which will provide a total of up to 20 uses per person
- The color coding on the mask assists with monitoring of correct usage and rest days

INTERMITTENT USER

- An intermittent user refers to a person who only uses the masks for brief periods of time, and not necessarily daily
- The mask may be reused as above or washed between uses as necessary
- Washing instructions: soak in hot, lightly soapy water for up to 5 minutes. Rinse and allow to drip dry completely before reusing.
- Can be washed up to 4 times, but water repellent properties may diminish.

ALL USERS

- Sharing of masks is strictly prohibited
- Avoid touching the surfaces on the mask
- Practice hand hygiene before and after removing the mask or following inadvertent contact with the outer layer during usage.
- Replace mask immediately if damaged or filter is compromised for any reason.
- The mask should not be used for more than 4 working days on a rotational cycle
- Use in conjunction with other infection control policies stipulated by Governing Bodies.

This mask does not constitute as medical PPE nor are they a replacement for normal precautionary infection control stipulated by the Department of Health Proper use of PPE should be adhered to at all time and in conjunction with the recommended infection control practices.

We do not accept any liability for the use of our products as PPE.



MATERIAL

50g Spunbond Nonwoven



SCRUB SUIT & COVERALLS

- Disposable
- Available in all sizes

2-PIECE
SCRUB
SUIT

HOODED
COVERALLS



EXPERT AUTOMOTIVE
TRIM

PERSONAL PROTECTIVE EQUIPMENT (PPE) | product catalogue

STAY SAFE

TEL: 031 463 1350 • FAX: 031 463 1154

EMAIL: admin@expertautotrim.co.za

25 Piet Retief Road, Queensmead Industrial Park, Malvern



EXPERT AUTOMOTIVE
— TRIM —